

COMPLETE / COMPLETE PLUS Range


CAVITY UNITS INSTALLATION GUIDE MARCH, 2024

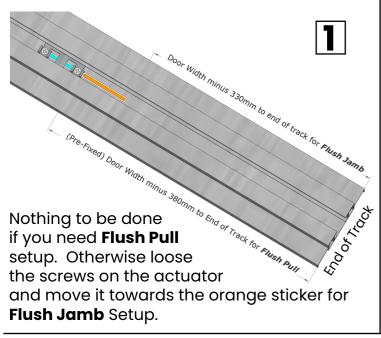


3

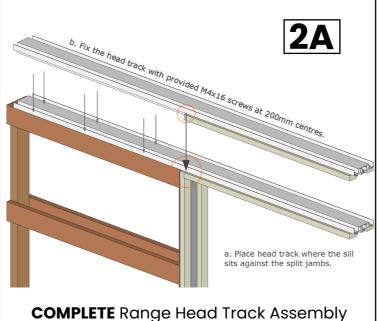




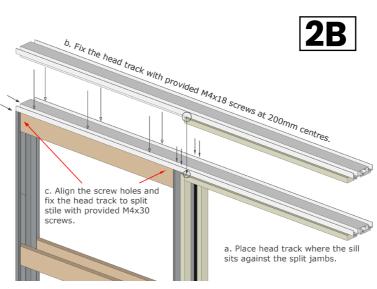


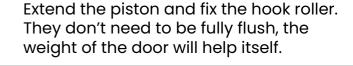


a. Extend the piston to its full length, the triangle will reside into the casing



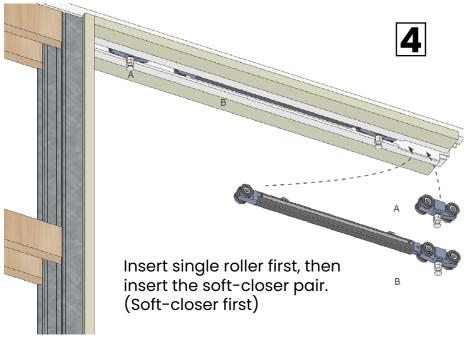


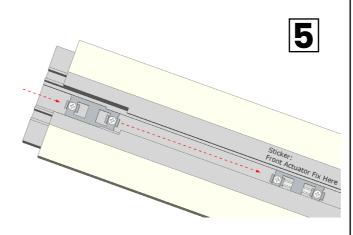


Loose the screws on the actuator. Insert actuator from the cut out and slide to cover the silver sticker. Tighten the screws to fix the actuator's position.

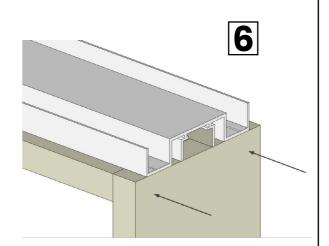


Fix Closing Jamb. (VIC Only)

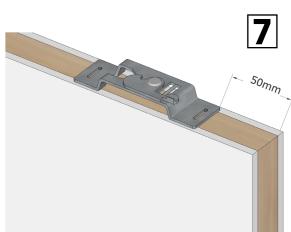


Fix both base plate 50mm to the edge of the door.

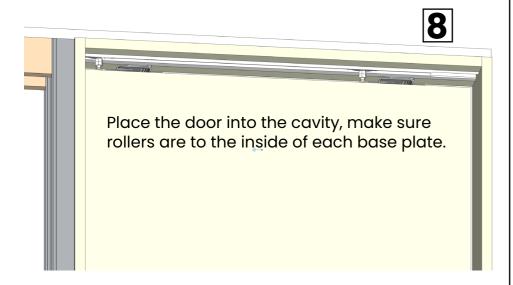

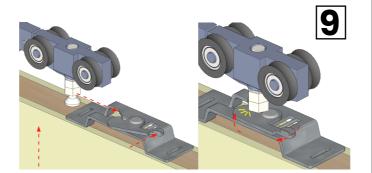


Lift the door to when the waist of the roller screw is facing the pening of the back plate.


Push the roller screw towards the opening with a finger or spanner provided, until the screw is catched by the back plate.

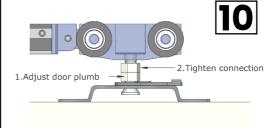

Use spanner provided to adjust the bottom nut on the roller screw, until the door is at the desired height and is plumb with the jamb.

Tighten the top nut af the adjustment.

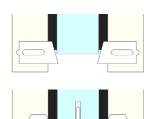

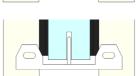

Fix nylon guide(s)



Floor clearence approx.: Min. 7mm Max. 17mm